



## How to use the **AIBEILE Tracking App**

Download from Play Store or App Store

Download the Aibeile phone app from the App Store or Play Store.

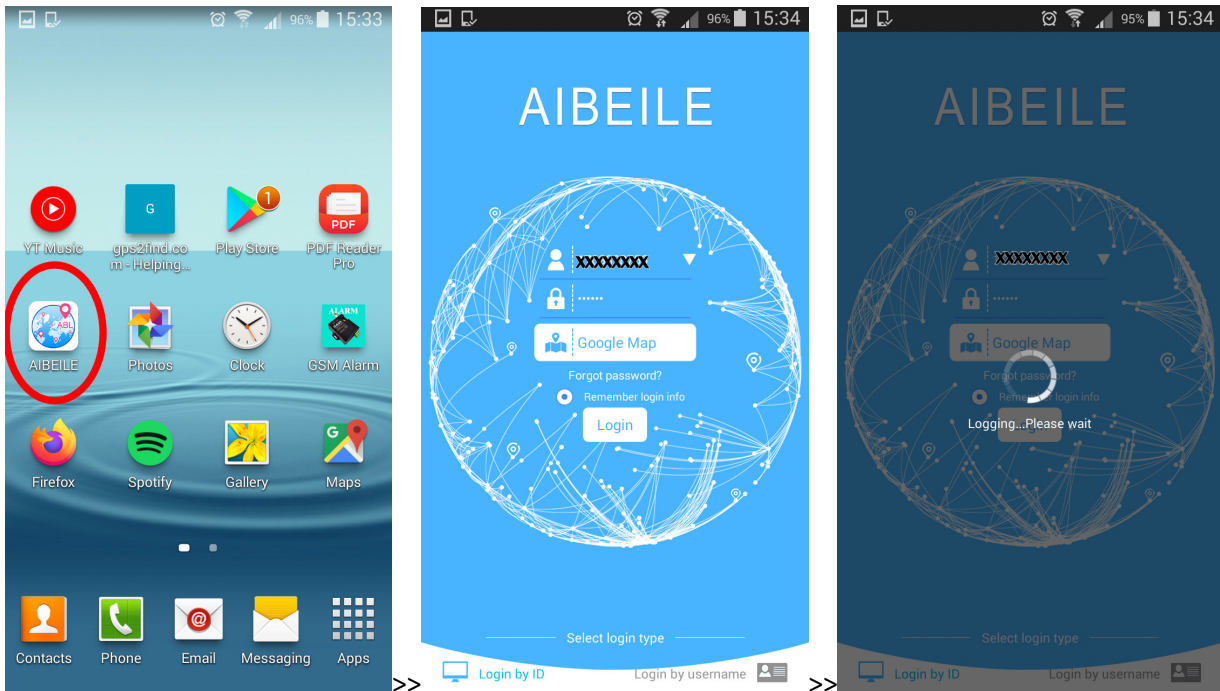

Select login type between Account (multiple trackers) and ID No. (individual trackers) down at the bottom of the login screen. Enter the assigned password, check the Remember checkboxes and Press Login.

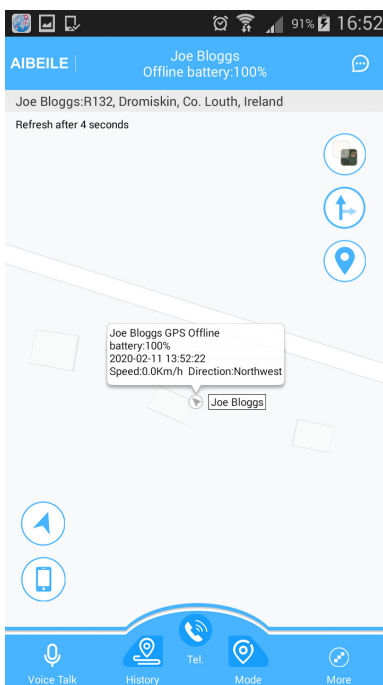

### Aibeile Homescreen

Target name, battery level, and street address and a link to the Alarms message inbox are at the top.


In the top right corner are buttons to toggle between map and satellite; to switch to Google Maps to work out a route; and a button to send a request to the target watch to update its location.

Beside the location arrow icon, there is an information box.


Bottom left, there are 2 buttons: Re-centre and zoom in on the target.

At the bottom there are 5 buttons: **Voice talk** to send a text message to the watch. In this function there is a Speech connection option which is unsupported with our SIMs; a **History** button to view paths in a past time period; **Tel.** to make a phonecall (unsupported); a **Mode** button to select the time period between location reports uploaded; and a **More** button to show the menu of other functions and settings.


History review

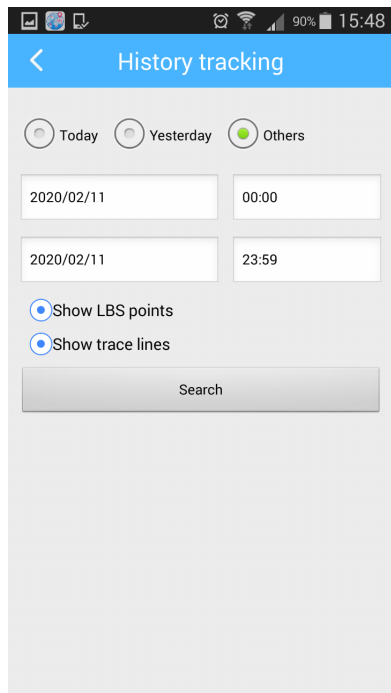

Working mode selection

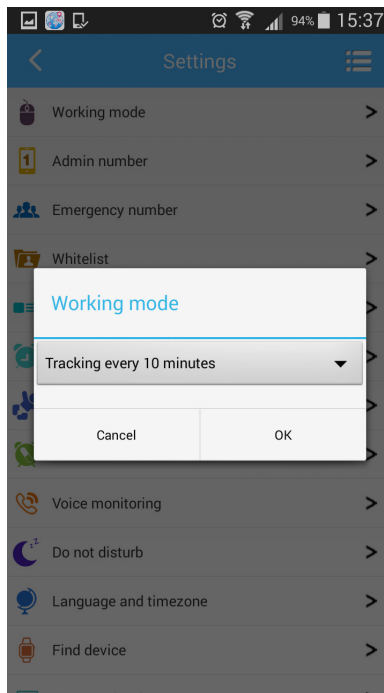

“More” function menu

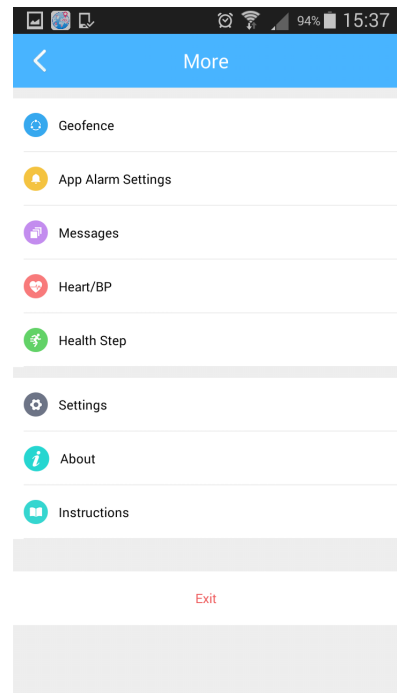

Going in the **More** menu, there are:

**Geofence** – to add or edit a Geofence so that alarms will be recorded in the Messages log if/when a



target watches cross the boundary of a set zone. Each one needs to be given a meaningful name.



The arrow button bottom left centred the zone on the current location.

Its diameter is set using the slide control at the top.

Press Save when finished.


The App Alarm Settings button allows the user to select whether alarms should be on or off, cause sound and/or vibration. The Messages option opens the Messages log showing alarms.

The **Heart/BP** (Blood Pressure) option opens a calendar page to display any measured cardiac parameters on a selected date. The measuring process is initiated on the watch by selecting the Heart

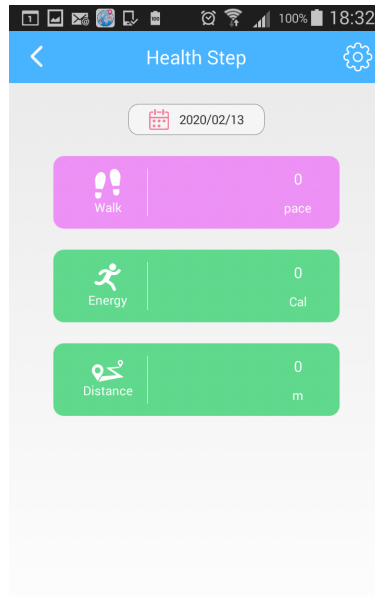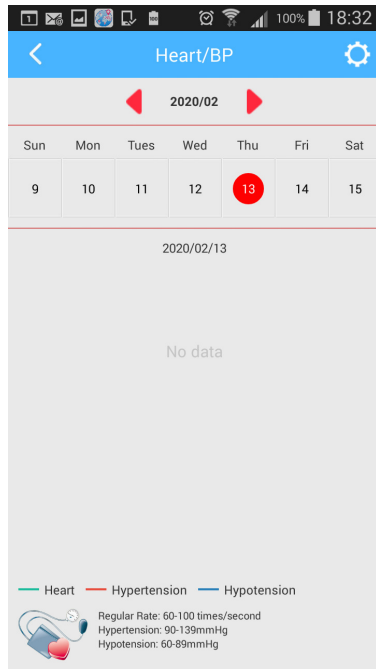

function. Results are uploaded to the cloud for future reference.


The **Health Step** counting function is also initiated from the watch, with daily totals available here.

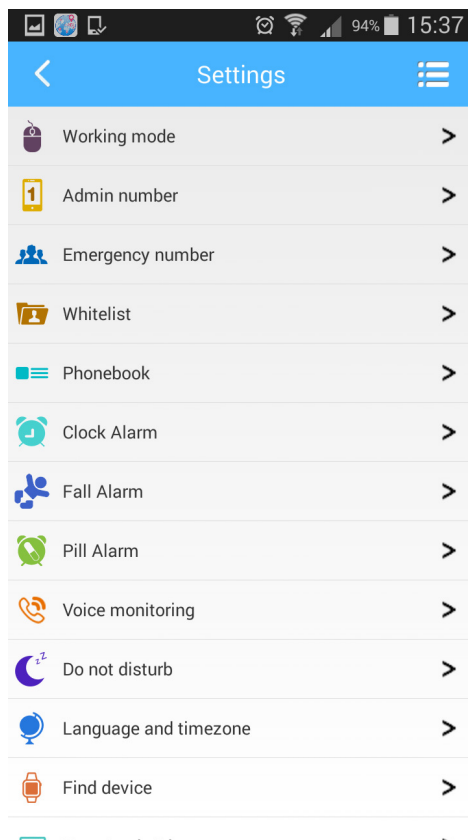

The **Settings** option is the gateway to a further menu of functions:

Working mode allows selection of reporting frequency time interval

**Admin number** defines the phone number of the person who is administrating the phone's settings. It requires a country code prefix and no spaces.

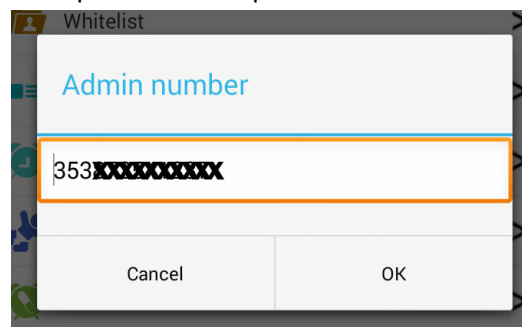


The **Emergency numbers** allow for 2 other family member phone numbers to be set which might have been called by the watch following a long (over 3 secs) of the watch's red button. Our SIMs do not support voice/phone communication.



The **Whitelist** allows 5 numbers to be set, which become the only numbers permitted to call the watch, also unsupported.

The **Phonebook** allows 15 people (names and numbers) to form a list, of which one can be set as the default, which gets rung by pressing the phone icon on the watch. Not supported.

**Clock alarm** allows a time to be set a Just One time, or Each day, or an alarm that occurs on particular days of the week – user definable.

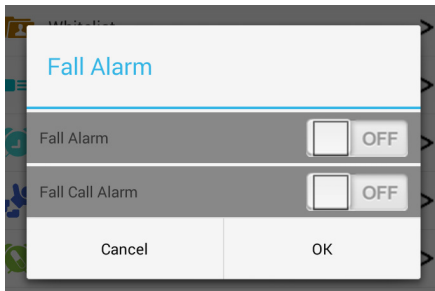


The **Fall alarm** can be turned on which, in the event of a fall, will either record a alarm. If the **Fall Call Alarm** is also turned on, it will also call the Admin number, unless the wearer cancels it, when prompted, if it's a false alarm.

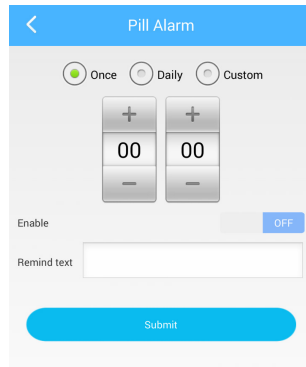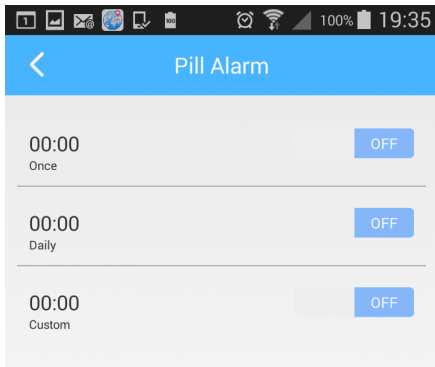


The **Pill Alarm** is a reminder for different pill taking regimes, like the Clock alarm (Once/Daily/SelectedDays) with an additional text box to explain medication type.


**Voice monitoring:** This is the main reason that our company doesn't support voice / phone use. The voice monitoring function allows someone to "listen in" as the watch makes a call to a specified number silently without the wearer being made aware.. This is judged a spying covert function.

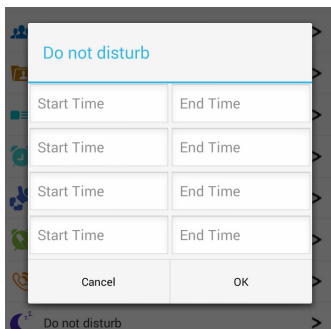


**Do not disturb** allows the setting of up to 4 time periods per day Monday to Friday only (From & To times) when calls will not be accepted by the phone. Does not include Sat and Sundays.

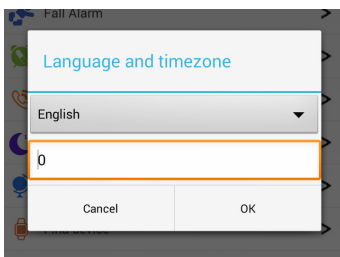


The **Language and Timezone** option allows the choice of language (0) and timezone (0 outside Daylight Savings Time DST) and 1 during DST. This doesn't change automatically and needs to be done manually here.

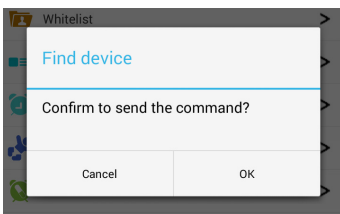


The **Find device** function if enacted makes the watch buzz, which helps locate it.

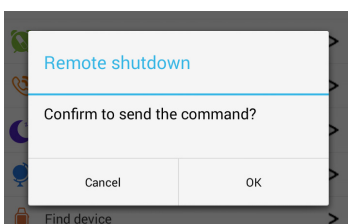


The **Remote Shutdown** function powers the watch off. The red button on the phone needs to be pressed 10 times to do the same thing.

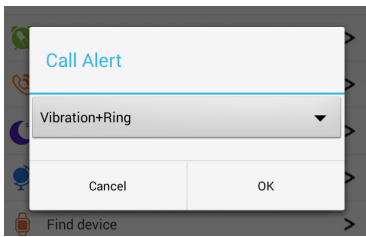


The **Call Alert** function controls whether the call alert is Mute, Vibration only, Ring only, or both Ring and Vibration.

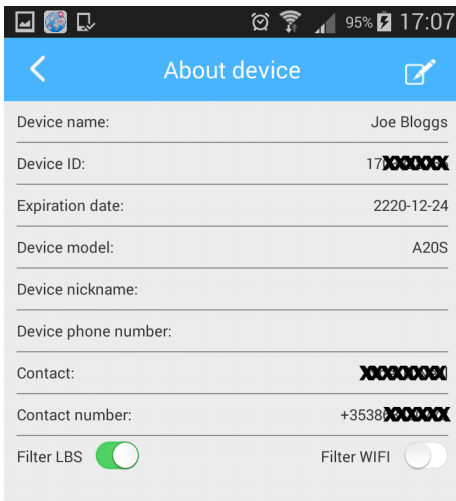


The **About device** function lists the target and contact details defined for the watch. Fields are not editable. There are filter switches to remove or include LBS (phone mast location estimates) and WiFi location estimates. We recommend filtering out LBS but leaving WiFi, as indicated.

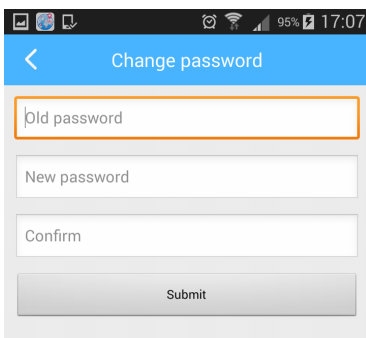

The **Change password** function allows for the changing of the password for the watch's account in the usual manner – old pass

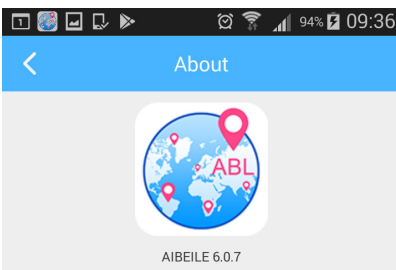

Below **Settings** on the **More** menu is the **About** which shows the version of Aibeile installed on the phone/tablet. There is a button to check for available updates.

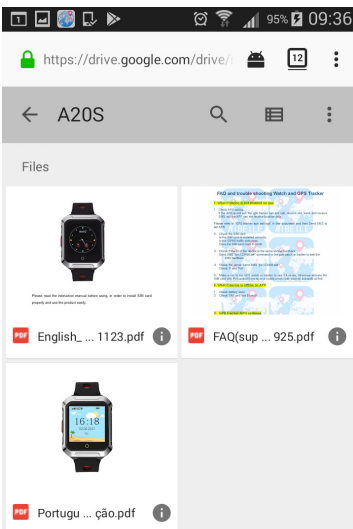

The **Instructions** function opens a Google Drive page showing available to help users online, including an explanatory User manual in English and Portuguese, and a FAQ document.

The **Sedentary** function which is on the watch only, lets the wearer open the Sedentary option and set a sedentary reminder time in minutes. This will cause the wearer to be reminded to get up and exercise if no movement is detected.

**Voice Time announcing** Press the red button twice to have the watch announce the time.